


1. DATA SEND (Send DATA to your PC)

- Connect the input of your MIDI interface to MIDI OUT on the EFX LITE 6M.
- DO NOT plug in power or MIDI IN jack.
- Our recommended MIDI interfaces are the M-Audio USB UNO 1x1 and the iCon MIDI Port 1x1. These MIDI interfaces are inexpensive and have been tested to be compatible with the EFX LITE 6M.

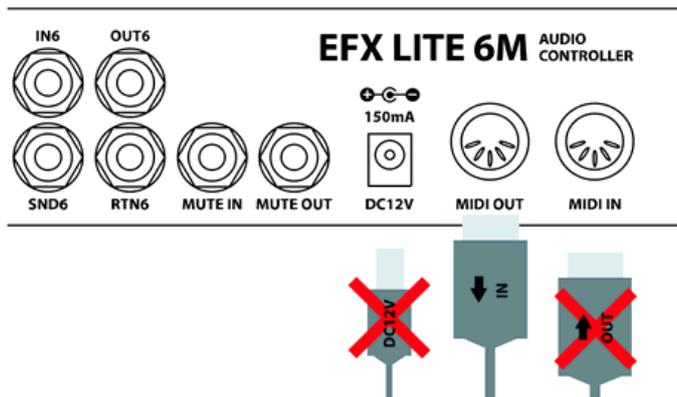

NOTE

- Some MIDI interfaces can not be used with the EFX LITE 6M. because the MIDI speed is too slow or the MIDI Active Sensing message is transmitted.
- Make sure to install the latest drivers for your MIDI interface before attempting to update the EFX LITE 6M.

Download and install SendSX <http://www.bome.com/product/sendsx>


Send SX is not free software. After a reasonable trial period, you will be asked to purchase Bome's Send SX to support its development on a voluntary basis. <http://www.bome.com/products/sendsx/purchase>




- Select the correct MIDI input from your MIDI interface

- Plug in power while holding the P3 and P4 switches down.

- The display will show 't', and the LED above the P3 switch will blink.

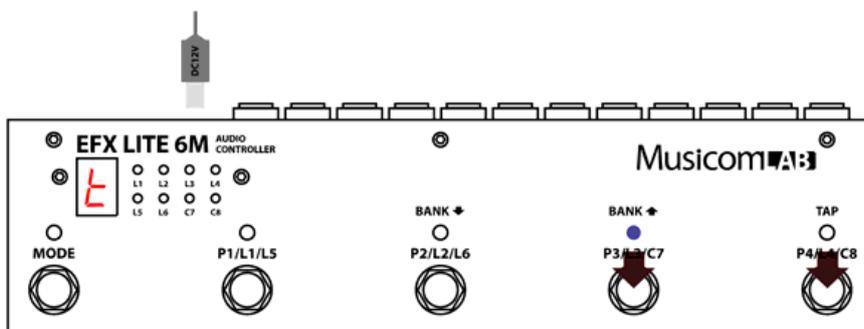

- At this moment, the two switches can be released.
- Press the P3 switch to transmit DATA to your PC through the MIDI OUT jack.

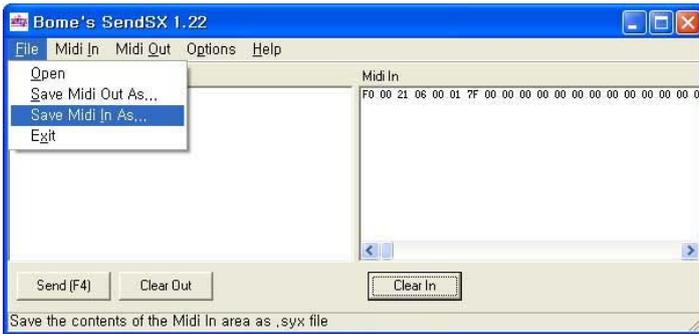

- Save Midi In as a new file name.

2. DATA EDIT/CREATE



Download and run **6M-EDITOR** <http://www.musicomlab.com/download/6M-EDITOR.zip>

- Open the Syx file or Press 'NEW'
- Edit the presets and preference.
- Save as a Syx file.




3. DATA RECEIVE (Receive DATA from your PC)

- Connect the output of your MIDI interface to MIDI IN on the EFX LITE 6M.
- DO NOT plug in power or MIDI OUT jack.

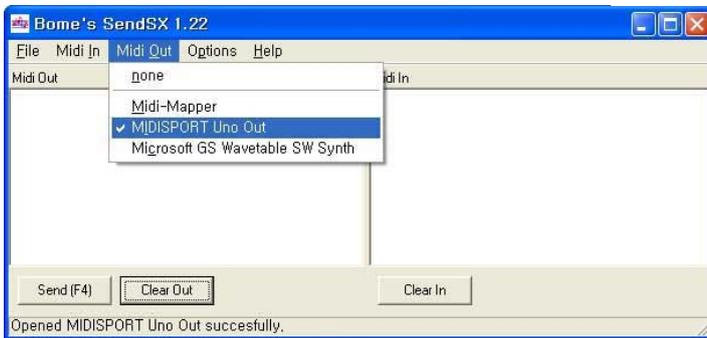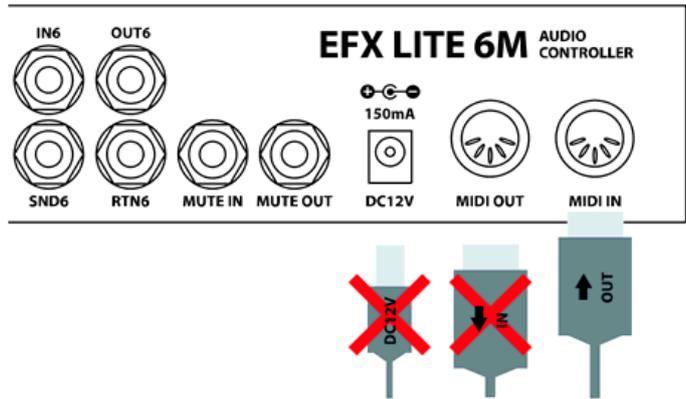

- Select the correct MIDI Output from your MIDI interface

- Plug in power while holding the P2 and P4 switches down.
- The display will show 'r', and the LED above the P2 switch will blink.
- At this moment, the two switches can be released.

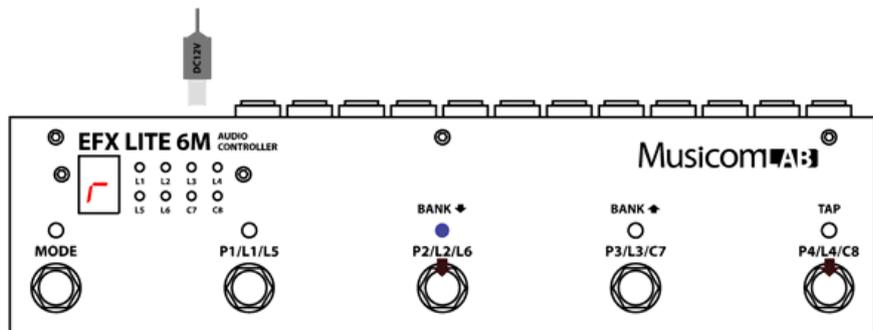

- Open the Syx file and press 'Send[F4]'
- The LED above the P2 switch will blink rapidly while the new DATA is loading.
- The EFX LITE 6M will automatically restart when the update is complete.